

Quick Start Guide

Victor Reader Wave

Overview

Victor Reader Wave plays books that are in daisy or MP3 format. This audio book player allows easy navigation. It is intended for users with learning disabilities and low vision.



To Use

How it is organized:

LCD Display

Line one displays volume, speed, and battery power

Line two displays the book title

Line three displays the section heading such as the title

Line four displays the function

Numeric Key Functions

Row one	1: Bookshelf	2: Navigation Element	3: Unused
Row two	4: Back	5: Where am I?	6: Forward
Row three	7: Unused	8: Navigation Element	9: Sleep
Row four	*: Cancel	0: Info	#: Confirm

Navigational Commands

Use basic functions of rewind, play/pause, and fast forward which is located below number keys.

Navigate using the 2,4,6, and 8 keys.

Navigate chapter or page using 2 and 8 keys. Continually press 2 or 8 to cycle through navigational elements (level 1, page, phrase, time jump). Stop when you have reached selected item. Then use 4 and 6 keys to move from selected element to another.

Advanced Features

Go To Options

Press once, go to page. Press twice, go to heading. Then press # key.

Bookmarks

Using Bookmarks allows you to return to a certain place easily and quickly. Options in Bookmarks are determined by the number of times you hit the bookmark key and will be announced as you cycle through the menu.

Go to Bookmark by pressing **Bookmark** key *once*, press number of bookmark, and **# key**. Audio reading will start

Insert Bookmark by pressing **Bookmark** key *twice* or holding the key down. Then enter the number you wish to assign the bookmark from 1 to 99998. If you don't select a number, the Wave will automatically assign numbers starting with 1. Press **# key** to insert the bookmark.

Bookmark List is used to hear how many bookmarks are saved. Press **Bookmark** key *three times*. Use the **4** and **6** key to navigate bookmarks. Audio reading will start.

Remove Bookmark_ Press **Bookmark** key *four times*. Enter bookmark number to be erased. Press pound key to confirm.

Web Resources

User Guide on Humanware

http://www.humanware.ca/web/Guides/VICTOR_READER_WAVE_USER_GUIDE.htm

HumanWare Canada Contact Information

1030, Rene-Levesque Blvd.

Drummondvill, Quebec.

Canada J2C 5W4.

Telephone: 1 (819) 471-4818.

Toll-free (Canada & USA): 1 (888) 723-7273.

Fax: 1 (819) 471-4828.

E-mail: ca.support@humanware.com

Website: www.humanware.com

Created by Kristel Schultz, Assistive Technology Resource Center, February 3, 2008